


How to add new remotes

Installation manual – SigmaGate

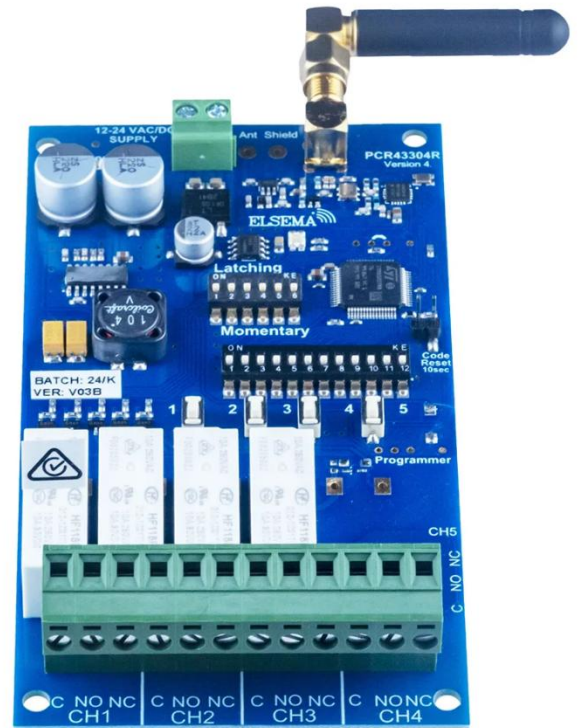

1. Add new remotes - SigmaGate

- Locate the SigmaGates. When standing in front of the gates as if you were going to walk through, the receiver is located on the back side of the right-hand side gate.



- Unlock the service hatch by using a flathead screwdriver to turn the lock into the vertical position.




NOTE: The gate is powered with 230V. Make sure that the power has been turned off before removing the service hatch. If that isn't possible, make sure that you don't touch anything inside the gate when the service hatch has been removed.


- Lift the service hatch up and away from the SigmaGate. Disconnect the earth cable from the service hatch and remove the service hatch.



- The receiver will be placed as in below picture. Check which DIP-switches that are on.

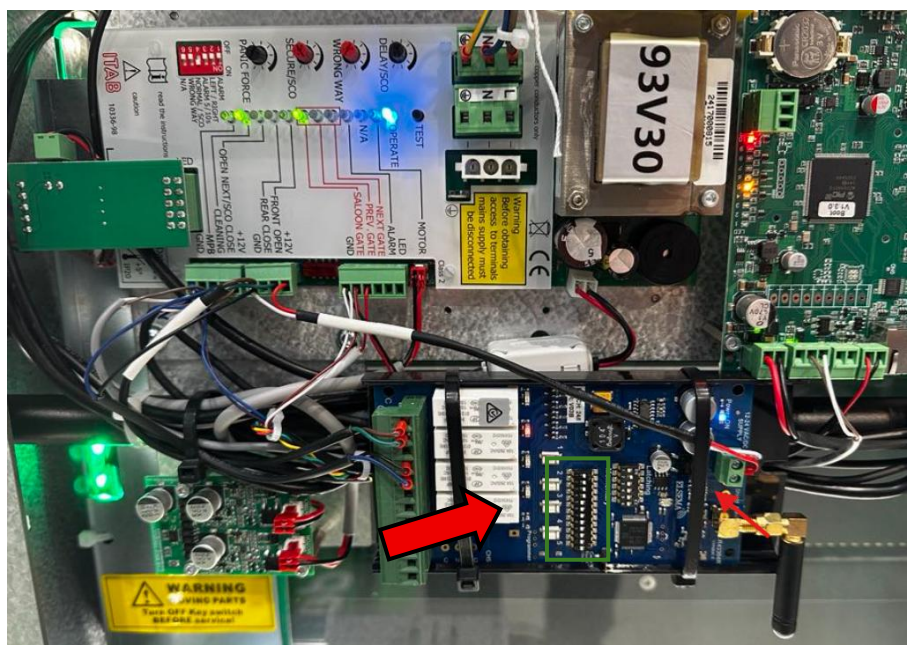

- Remove the cover on the back side of the remote. Push it in the direction as the arrows are pointing in. Set DIP-switches 1-10 in the remote exactly as in the receiver. DIP-switches 11/12 should always be OFF/OFF. Lastly, insert the battery and test the functions.

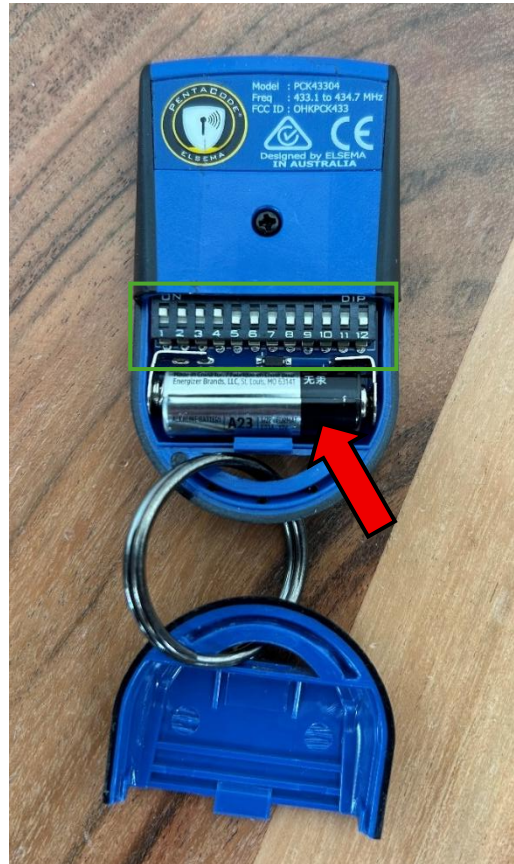

- Finally:
 - Put the cover back on, on the remote.
 - Put the service hatch back on, on the gate.
 - Connect the earth cable.
 - Lock the service hatch on the gate, horizontal.

2. Change battery on existing remote

- Remove the cover on the back side of the remote. Push it in the direction as the arrows are pointing in. Remove existing battery. Add a new battery, model A23. Test the functions before putting back the cover.

